

## TROUBLESHOOTING

Problem		Possible cause/action
After power is supplied, the power level display fails to light up.		<ul style="list-style-type: none"> <li>• The plug is not inserted tightly.</li> <li>• The switch, socket, fuse and power cord are not in good condition.</li> </ul>
The power level display lights up but heating does not start.		<ul style="list-style-type: none"> <li>• The pot material is not suitable.</li> <li>• For other reasons, please contact your service technician.</li> </ul>
Heating stops suddenly during operation.		<ul style="list-style-type: none"> <li>• The ambient temperature is too high.</li> <li>• The air inlet or outlet is blocked.</li> <li>• The voltage is outside the range of this appliance.</li> <li>• The timing period has reached.</li> <li>• The system protection functions and is conducting energizing test.</li> </ul>
Code of failure.	E3, E6	Wait a few minutes for the temperature of the appliance to become normal. Press the power control button and the induction cooktop will operate as usual.
	E7, E8	Wait a few minutes. When the voltage is back to normal, the induction cooktop will operate as usual.
	E1, E2, E4, E5, Eb, EC	Please contact your service technician.



## Environmental Information

**RoHS**  
Compliant.

If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to collecting points where available.

**This product is RoHS compliant.**